


## Removing Side Panel of DTF24H4 Dryer

1. Unplug the dryer from your outlet, then loosen the screws that hold the media take up poles in place and slide the poles out of the side of the cover on the side where the breakers are.



2. Open the heat chamber by pulling up on the back of the unit

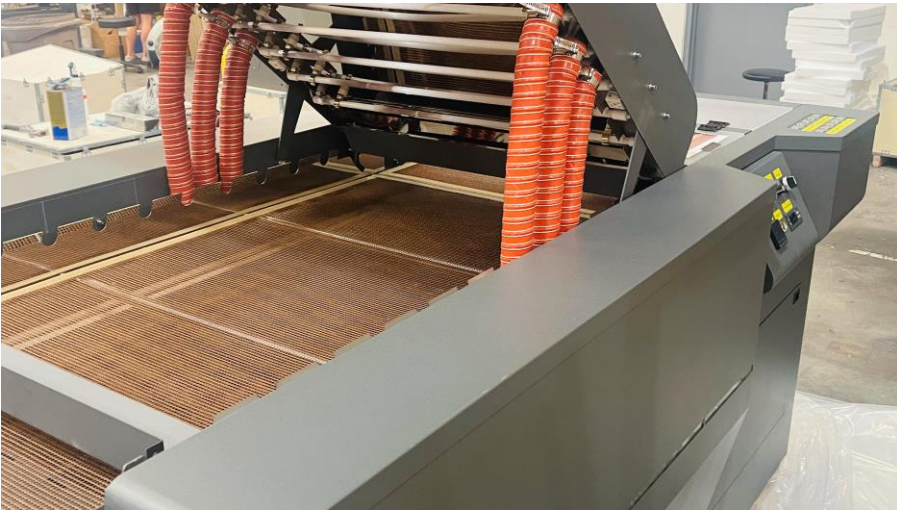

3. Remove the top cover



- Using a Phillips screwdriver, remove the 5 screws on the bottom panel, be sure to unplug the cables going into the white power strip.



- If your system has a black cable as indicated in red, disconnect the cable at the white fitting. Using a 3mm allen wrench, remove the 3 screws on the left inside of the panel and the 2 screws on the right inside of the panel. The cover can now be removed from the dryer.

